

# Firebox® T85-PoE

HW Model: BL8AE8

## Quick Start Guide

Guía Rápida

Guide de démarrage rapide

クイックスタート・ガイド




[watchguard.com/start](https://watchguard.com/start)

### Activate Your Firebox

1. Go to [www.watchguard.com/activate](https://www.watchguard.com/activate)
2. Log in to your WatchGuard account, or create a new account.  
*If you create a new account, return to [www.watchguard.com/activate](https://www.watchguard.com/activate) after you finish the account creation process.*

### Connect Your Firebox and Power It On

Make sure your computer is configured to use DHCP. When you connect to the Firebox, it will assign an IP address on the **10.0.1.0/24** network.

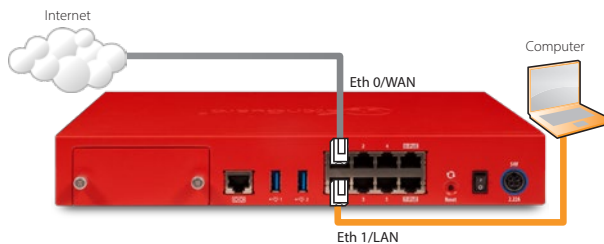

### Connect to the Web UI

1. Go to <https://10.0.1.1:8080>  
*You can safely ignore certificate warnings, because the Firebox uses a self-signed certificate.*
2. Log in with the user name **admin** and the passphrase **readwrite**.
3. Follow the directions in the Web Setup Wizard to configure your Firebox.
4. Install the Firebox in your network.

For more information, go to [watchguard.com/start](https://watchguard.com/start)


### Activation de votre appliance Firebox

**FRANÇAIS**

1. Rendez-vous à l'adresse [www.watchguard.com/activate](https://www.watchguard.com/activate)
2. Connectez-vous à votre compte WatchGuard ou créez un nouveau compte.  
*Si vous créez un nouveau compte, retournez à l'adresse [www.watchguard.com/activate](https://www.watchguard.com/activate) à la fin du processus de création du compte.*

### Branchement et mise sous tension de votre appliance Firebox

Assurez-vous que votre ordinateur est configuré pour utiliser le protocole DHCP. Lorsque vous connectez votre appliance Firebox, elle attribue une adresse IP sur le réseau **10.0.1.0/24**.

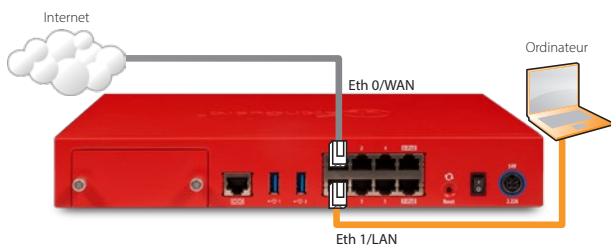

### Connexion à l'interface utilisateur Web

1. Rendez-vous à l'adresse <https://10.0.1.1:8080>  
*Votre appliance Firebox utilisant un certificat auto-signé, vous pouvez, sans risque, ignorer les avertissements liés aux certificats.*
2. Connectez-vous avec le nom d'utilisateur **admin** et le mot de passe **readwrite**.
3. Suivez les instructions de l'Assistant de configuration Web pour configurer votre appliance Firebox.
4. Installez l'appliance Firebox sur votre réseau.

Pour plus d'informations, rendez-vous sur [watchguard.com/start](https://watchguard.com/start)


### Active su Firebox

**ESPAÑOL**

1. Visite [www.watchguard.com/activate](https://www.watchguard.com/activate)
2. Inicie sesión con su cuenta de WatchGuard o cree una cuenta nueva.  
*Si usted crea una cuenta nueva, regrese a [www.watchguard.com/activate](https://www.watchguard.com/activate) luego de finalizar el proceso.*

### Conecte su Firebox y Enciéndalo

Asegúrese de que su equipo esté configurado para usar DHCP. Cuando se conecte a su Firebox, este le asignará una dirección IP en la red **10.0.1.0/24**.

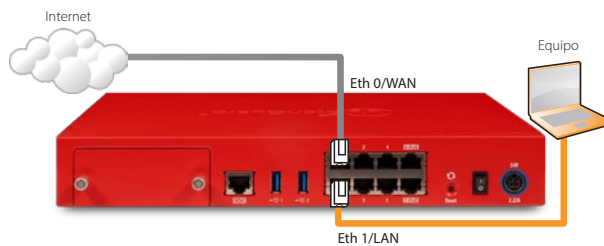

### Conéctese a la Interfaz de Usuario Web

1. Visite <https://10.0.1.1:8080>  
*De manera segura, puede ignorar cualquier certificado de advertencia debido a que el Firebox usa un certificado con firma automática.*
2. Inicie sesión con el nombre de usuario **admin** y la frase de contraseña **readwrite**.
3. Siga las directivas en el asistente de instalación web para configurar su Firebox.
4. Instale el Firebox en su red.


Para más información, vaya a [watchguard.com/start](https://watchguard.com/start)

## Firebox を起動する

1. [www.watchguard.com/activate](http://www.watchguard.com/activate) にアクセスします。
2. 登録済みの WatchGuard アカウントにログインするか、新しいアカウントを作成します。  
新しいアカウントを作成する場合は、アカウント作成プロセスが完了してからもう一度 [www.watchguard.com/activate](http://www.watchguard.com/activate) にアクセスしてください。

## Firebox を接続して電源を入れる

コンピュータが DHCP を使用するように設定されていることを確認します。  
Firebox への接続時に、**10.0.1.0/24** ネットワーク上の IP アドレスが割り当てられます。

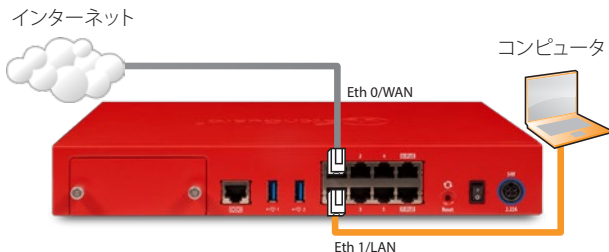

## Web UI に接続する

1. <https://10.0.1.1:8080> にアクセスします。  
Firebox は自己署名証明書を使用するため、証明書に関する警告は無視してかまいません。
2. ユーザー名 **admin** とパスワード **readwrite** でログインします。
3. ウェブセットアップ・ウィザードの手順に従って、Firebox を設定します。
4. ウィザードが完了したら、ユーザー・アカウント **admin** と、ウィザードで設定した管理用パスワードで Web UI にログインします。

詳細については、[watchguard.com/start](http://watchguard.com/start)

### DECLARATION OF CONFORMITY

WatchGuard Technologies, Inc.  
505 Fifth Ave. S., Suite 500  
Seattle, WA 98104-3892 USA

WatchGuard Technologies Inc. hereby declares that the product(s) listed below conform to the European Union directives and standards identified in this declaration.

#### Product(s):

WatchGuard Product Name : Firebox T85-PoE  
Hardware Model : BL8AE8

#### EU Directive(s):


Low Voltage (2014/35/EC)  
Electromagnetic Compatibility (2014/30/EU)  
RoHS EU 2015/863(RoHS2)  
WEEE Directive 2012/19/EU  
REACH EC 1907/2006,

#### Standard(s):

**Safety:** EN 62368-1:2014+A11:2017  
**Emission:** EN 55032 :2015/A11 :2020  
FCC Part 15B  
ICES-003 Issue 7  
CISPR 32:2015+AMD1:2019  
VCCI-CISPR 32:2016  
AS/NZS CISPR 32:2015/AMD1:2020

**Immunity:** EN 61000-3-2:2014  
EN 61000-3-3:2013+A1:2019  
EN 55035:2017/A11:2020  
IEC 61000-4-2 Edition 2.0 2008-12  
IEC 61000-4-3 Edition 3.2 2010-04  
IEC 61000-4-4 Edition 3.0 2012-04  
IEC 61000-4-5 Edition 3.1 2017-08  
IEC 61000-4-6 Edition 4.0 2013-10  
IEC 61000-4-8 Edition 2.0 2009-09  
IEC 61000-4-11 Edition 3.0 2020-01

Signature:

Laurence Huang 

Full Name: Laurence Huang  
Position: Hardware Program Manager  
Date: 2 December 2022

### CE Notice:

The CE symbol on your WatchGuard Technologies equipment indicates that it is in compliance with the Electromagnetic Compatibility (EMC) directive and the Low Voltage Directive (LVD) of the European Union (EU).



### RoHS Statement

The member states of the European Union approved directive 2002/95/EC, Restrictions of Hazardous Substances ("RoHS directive") that became valid on July 1, 2006. It states that all new electrical and electronic equipment put on the market within the member states must not contain certain hazardous materials. This device complies with the European Union's RoHS directive 2002/95/EC and similar regulations that may be adopted by other countries for European Sales.

To see additional certification information and languages, go to [watchguard.com/start](http://watchguard.com/start)

### WATCHGUARD TECHNICAL SUPPORT

1.877.232.3531 (U.S. and Canada) +1.206.613.0456 (all other countries)

[www.watchguard.com/support](http://www.watchguard.com/support)



ADDRESS: 505 Fifth Avenue South, Suite 500, Seattle, WA 98104  
U.S. SALES: 1.800.734.9905 • INTERNATIONAL SALES: +1.206.613.0895  
WEB: [www.watchguard.com](http://www.watchguard.com)