




XTM 2050 Rack Mount Kit

This guide describes how to use the rack mount system to install your XTM 2050 device in a network rack.

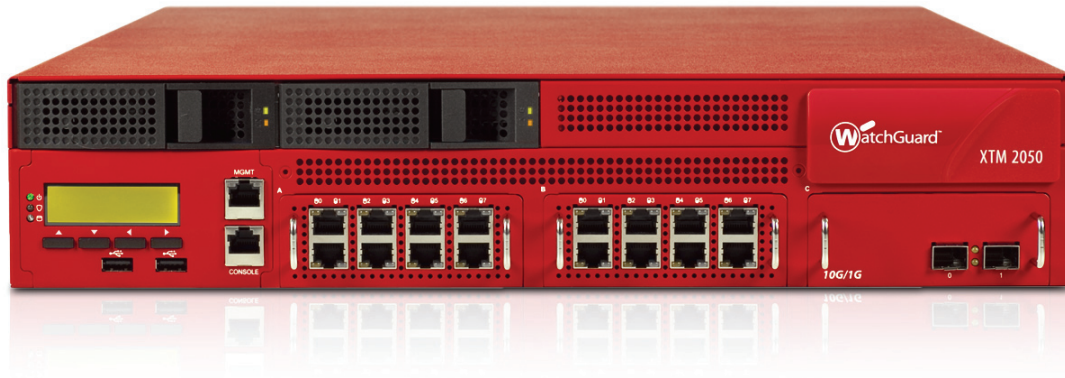


Rack Mount Kit Contents

Each WatchGuard® XTM 2050 device ships with a rack mount system. The rack mount system consists of:

- 2 outer rails
 - 8 screws — to attach the outer rails to the network rack
 - 8 conical washers
 - 4 inner rail pieces
 - 20 M4 screws — to attach the inner rail pieces to the XTM 2050 device
 - 2 front mounting plates
 - 4 screws — to attach the front mounting plates to the XTM 2050 device
-


Rack Mount Rail Installation

1. Locate the outer rails, the eight screws, and the eight conical washers .

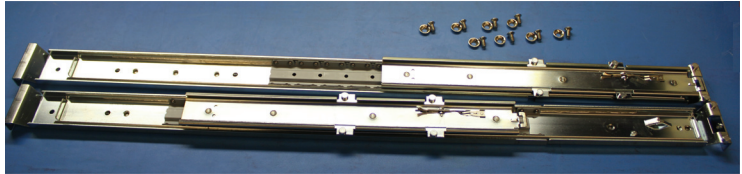

2. Attach the rails to the left and right sides of the rack. Make sure that the sliding piece is toward the front of the rack and faces the center.

Use the eight screws with the conical washers to attach the rails.

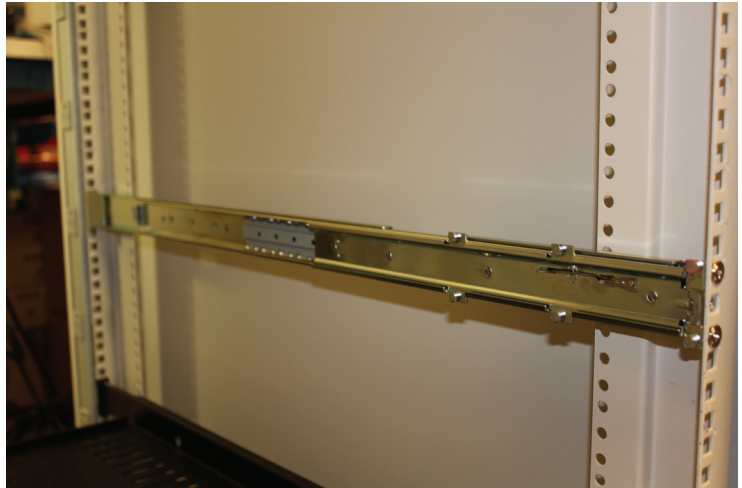

3. Attach two of the four inner rail pieces to the left front and right front sides of the XTM 2050. Each inner rail piece attaches with five screws.




4. Attach the other two inner rail pieces to the left rear and right rear sides of the XTM 2050. Two rail pieces form one long rail on each side of the device. The ends of the rails extend slightly beyond the rear of the device.



-
5. Attach the front mounting plates to the left front and right front sides of the XTM 2050, in front of the inner rail. Each mounting plate attaches with two screws.




6. Put the XTM 2050 in your network rack. Position the device so the inner rails slide inside the outer rails attached to your network rack. Use two screws (not included) on each side to secure the device to the rack .

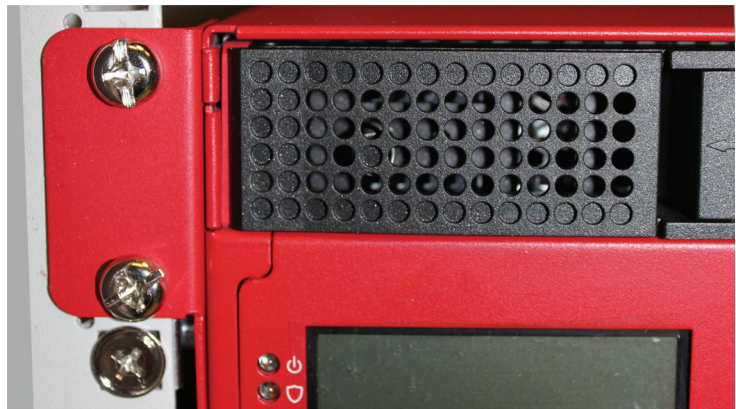

Remove the XTM 2050 from the Rack

The XTM 2050 rack mount system includes two sets of rail stops that you must press in order to remove the device from the rack. It could require two people to remove the device from the rack. The rail stops are located on each inner rail piece.

Each rail stop looks like this:

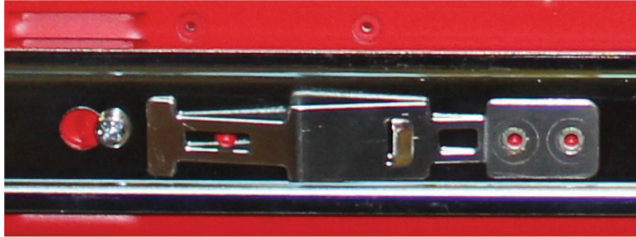

To remove the XTM 2050 from the rack:

1. Remove the four screws that attach the XTM 2050 to the front of the rack.
2. Slide the device out about half way until the first rail stops catch on each side.
3. Press the metal rail stops on the inner rails on both sides while you pull the device farther out.
4. Continue to slide the device out until the second rail stops catch on each side.
5. Press the metal rail stops on the inner rails on both sides while you pull the device farther out.
6. Slide the device out of the rack.

Copyright© 1998 - 2013 WatchGuard Technologies, Inc. All rights reserved.

WatchGuard, the WatchGuard logo, LiveSecurity, and any other mark listed as a trademark in the "Terms of Use" portion of the WatchGuard Web site that is used herein are either registered trademarks or trademarks of WatchGuard Technologies, Inc. and/or its subsidiaries in the United States and/or other countries. All other trademarks are the property of their respective owners.

Revision date: July 15, 2013

Part Number: 369-3860-001 Rev B